



# Under the Microscope

## Facilitating In Vitro Diagnostics with the GENE-ADP6

### Introduction

The in vitro diagnostics (IVD) industry has seen rapid growth in recent years, with substantial investment encouraged by impressive breakthroughs in the ability to not only diagnose diseases, but also detect risk factors for disease using biomarker analysis.

Additionally, the advancement of IVD technology has the potential to mitigate errors which commonly occur during the analytical phase of testing, which are primarily caused by human error. It is therefore vital for IVD equipment to constantly innovate and improve to make blood testing more accurate and efficient.


A leader in the European IVD market wanted to upgrade their multiplex testing machines, used to perform a wide array of blood analysis functions such as immunoassay, clinical chemistry, and molecular testing.

However, there were several key attributes the company felt the single-board-computer used to power such sophisticated machinery needed to have.

## Project Requirements



The first, and most important of the IVD provider's needs was the computing power of the board. Due to the vast volume of data processed during blood sample analysis, it was imperative that the solution chosen have exceptional computing performance to ensure thousands of tests could be performed per hour, while still maintaining accurate data output.

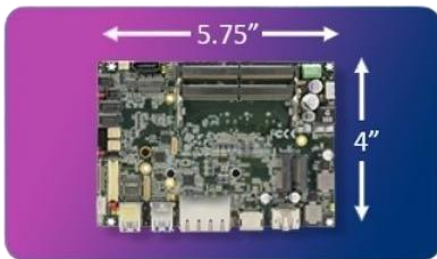


Secondly, the customer required a board with a small form factor, so it could be deployed within a larger mechanical unit. Given the number of samples a benchtop laboratory analyzer is expected to process, ensuring sufficient space was maintained was important.



Lastly, the company required a board with an I/O compatible with other components used in their machinery, specifically charge-coupled device (CCD) cameras. Therefore, multiple internal USB ports were a prerequisite for any solution to qualify as suitable.


# Application Architecture

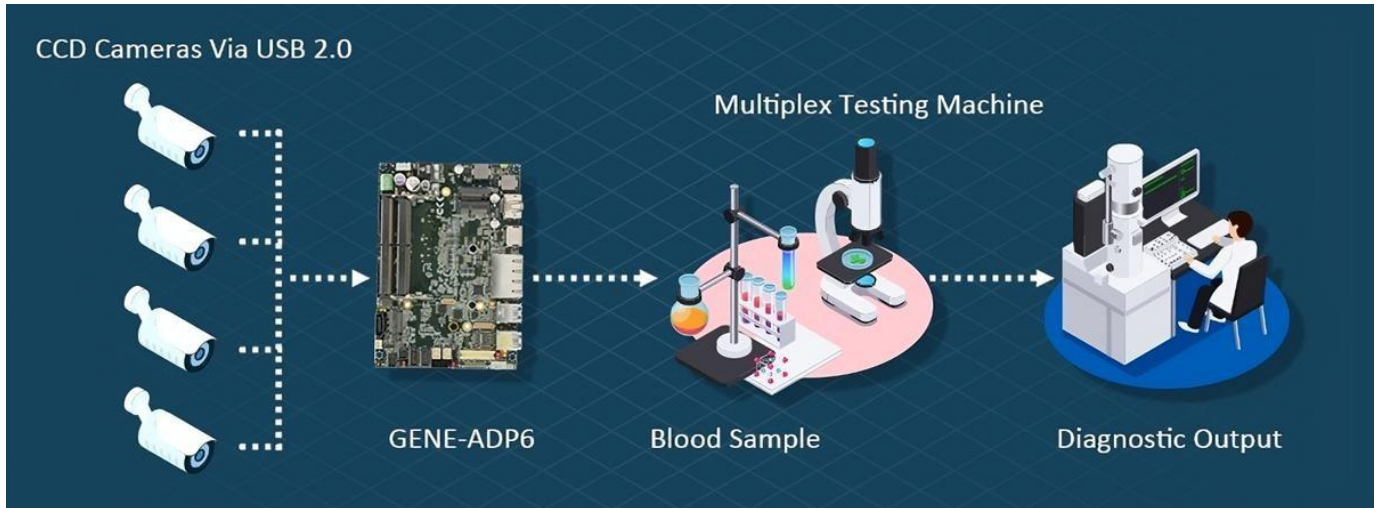

## Why the GENE-ADP6?

### High-Powered Computing

Powered by the 12th Generation Intel® Core™ i3-1220PE processor, the GENE-ADP6 contained ample computing power through the CPU's performance hybrid architecture, which provides eight cores (four performance-cores, four efficient-cores) and 12 threads.

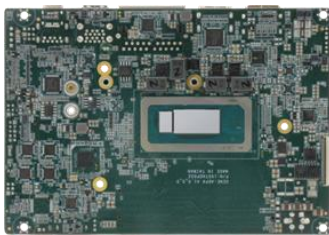

This allowed the CPU application to dedicate maximum computing power to the most intensive, single-threaded workloads via its performance cores, while maintaining energy-efficiency by having efficient cores focus on multi-threaded throughput. In addition to this, the [GENE-ADP6's](#) support for 64GB of DDR5 4800MHz system memory enabled exceptional bandwidth to ensure high-speed connectivity between the [GENE-ADP6](#) and the CCD cameras connected to it.

## Small Form Factor, Functional Suitability

Despite its excellent computing performance, the [GENE-ADP6](#) measures just 5.75” x 4” (146mm x 101.7mm), making it ideal for the customer’s need for a small solution to fit within their multiplex testing machines. The choice to opt for the smallest possible board did not limit the company’s options when it came to functionality however, with the [GENE-ADP6](#) seemingly tailor-made for their needs.

With four internal USB 2.0, three external USB 3.2 Gen 2, and dual 2.5GbE/1GbE ethernet ports, the [GENE-ADP6](#) was able to achieve exceptionally fast connectivity, with the aid of the board’s DDR5 system memory. Consequently, the customer’s multiplex testing machines were able to support the CCD cameras needed for the machine to capture the light emissions it needed to in order to analyze blood samples, with the added benefit of the process being faster and more accurate.

## Impact

The success of this application opens the door for the [GENE-ADP6](#) to be deployed in other smart healthcare solutions, with its configuration of functions conducive to channeling the power of AI even within space-limited environments. An example of these functions is its display interface, featuring a HDMI 2.1 port supporting up to 8K display resolution, along with DP 1.4a, LVDS, and an additional USB Type-C port. These functions, combined with the board’s compatibility with Intel® UHD Graphics for 12th Gen Intel® Processors, lend themselves to applications such as diagnostic imaging and more.

## About Workman Solution

Established in 1992, Workman Solution is one of the leading designers and manufacturers of industrial IoT and AI Edge solutions. With continual innovation as a core value, Workman Solution provides reliable, high-quality computing platforms including industrial motherboards and systems, rugged tablets, embedded AI Edge systems, uCPE network appliances, and LoRaWAN/WWAN solutions. Workman Solution also provides industry-leading experience and knowledge to provide OEM/ODM services worldwide. Workman Solution works closely with premier chip designers to deliver stable, reliable platforms. For an introduction to Workman Solution's expansive line of products and services, visit [www.workmansol.com](http://www.workmansol.com).



**Always Agile, Always Ahead.**

### Follow Us



 Facebook



 YouTube



 LinkedIn



 X